



# Constructing a Low-cost High Tunnel

*Brent Black, Dan Drost, Daniel Rowley and Rick Heflebower*

## Site Selection

A high tunnel is designed for intensive management of a small area. Therefore, site selection is critical. Tunnels should be located in well-drained soils that are fertile and free of serious pathogens, weeds and other problems. The site should not be shaded, particularly on the south and west sides. The tunnel needs to be located near a [year-round water source](#). This may require a freeze-free tap connected to a culinary water system in the winter. Access to power may also be beneficial. When constructing more than one house and the houses have an east-west orientation, separate them by about [10-feet](#) so shading between houses is minimized.

To build a high tunnel you will need a circular saw, electric drill, drill bits, sledge hammer, a square, tin snips, and a 1/4" drill bit. Table 1 provides the materials list for tunnels that are 42, 90 or 140 foot long. Table 2 lists materials needed for constructing the doors. The following descriptions will assist you in building the end walls and doors, and in assembling the tunnel. While the end walls and doors can be constructed by one person, extra help will be needed to cover the tunnel with plastic and to help fasten the plastic to the end walls.

## Constructing the Tunnel End Walls

1. To construct the two end walls you will need two 16' long 2x4's, four 10' long 2x4's, and eight 8' long 2x4's.
2. The instructions below will construct one end wall as per Diagram #1. First, cut the lumber lengths as specified in Table 3 to minimize wastage. Start the end wall construction with part "A" and finish the construction with part "L".
3. Center and drill a 1/4" hole 1 foot from each end of the base plate "A". The rebar corner anchors and the end wall arches fit into these 1/4" holes.
4. Assemble parts "[A](#)" through "[H](#)" as shown on the end wall Diagram #1. Start with board "A" and screw board "B" to board "A" using two 3" wood screws. Continue fastening board "C" and "D" making sure that the door opening (5' wide) is centered, the side walls are square and all boards fit together at 90° angles.
5. Attach parts "E" and "F" as outlined on Diagram #1 and then attach parts "G" and "H".
6. Lay boards "I" and "L" [on top](#) of assembled end wall and use a pencil to mark the angles (22° and 68°) from below. Make sure that there is a [1 inch gap](#) between the 1/4" holes in part "A" and the attachment point between "A" and parts "I" and "L". While the two angles (22° and 68°) can be measured, the measurements do not need to be exact, so marking them as illustrated before cutting is easier than measuring the angles. Cut the correct angle, position them as illustrated in the diagram and fasten them to the end wall with 3" screws.
7. Lay boards "J" and "K" against assembled end wall and mark the two angles (47° and 43°) with a pencil from below as suggested in step #6. Cut the angles, position them as illustrated in the diagram and fasten with 3" screws.
8. Repeat steps 2 to 7 to construct second end wall.
9. After building the walls, the wood can be protected with a coat of exterior grade latex paint, if desired.

Table 1. Materials needed to construct a high tunnel and their associated costs. Quantities and costs (local pricing) are presented for constructing tunnels 14 feet wide and in lengths of 42, 90 or 140 feet.

	Quantity			Unit price <sup>3</sup>	Cost		
<b><u>Tunnel</u></b>	Tunnel length				Tunnel length		
	42'	90'	140'		42'	90'	140'
6 mil greenhouse plastic (24' wide) <sup>1</sup>	50'	100'	150'	\$2/ft	\$130	\$200	\$300
2" x 24" precut rebar for side anchors	30	62	96	\$1.09	\$32.70	\$67.58	\$104.94
1" schedule 40 PVC pipe - hoops -ridge purlin	340' 40'	700' 100'	1080' 140'	\$5.40/20'	\$102.60	\$216.00	\$324.00
PVC cement to glue arch pieces	1 pint			\$5.70	\$5.70		
Baling twine - lash frame, secure plastic (10' for each 1' of tunnel length)	available in 5000' roll			\$20.99	\$20.99		
Cross connectors for purlins	13	29	46	\$2.15	\$27.95	\$62.35	\$98.90
White exterior latex paint to coat PVC hoops <sup>2</sup>	1 qt.	2 qts.	3 qts.	\$14.00/gal.	\$14.00		
<b>Tunnel subtotal</b>					<b>\$333.94</b>	<b>\$586.62</b>	<b>\$868.53</b>
<b><u>End walls</u></b>							
Lumber - 8 foot 2 x 4 10 foot 2 x 4 16 foot 2 x 4 4' lathe	8 lengths 4 lengths 2 length 1 bundle of 50			\$1.98 \$3.27 \$5.84 \$9.78		\$15.84 \$13.08 \$11.68 \$ 9.78	
Wood screws - 3" construct wall 1 5/8" to attach lath to end wall		1 box 1 box		\$8.50 \$8.50		\$8.50 \$8.50	
Plumbers hanger strap (attach last hoop and to support posts to end wall)	12'			\$3.26 25' roll		\$3.26	
White exterior latex paint		1 gal.		\$14.00		\$14.00	
Corner reinforcing brackets		16		\$ 0.70		\$11.20	
T-posts to support end walls		8		\$4.19		\$33.52	
				<b>End wall subtotal</b>		<b>\$129.36</b>	
<b>Total excluding doors</b>					<b>\$463.30</b>	<b>\$715.98</b>	<b>\$997.89</b>

<sup>1</sup>Standard lengths for plastic are 100', 150' and 220'. Custom lengths are available but require a 30% surcharge.  
<sup>2</sup>Paint requirement for end walls and hoops may exceed 1 gallon.  
<sup>3</sup>Cost may vary depending on source and availability and are illustrative only

Table 2. Various door options and associated cost per door

	Quantity	Unit price	Cost
<b>Option 1 - roll up curtain</b>			
Plastic*	6' x 7'	left over*	
Lumber - 2x4 x 8'	1	\$1.98	\$1.98
4' lath	3	left over	
Baling twine to secure curtain to endwall	20'	left over	
Eye screws for baling twine	4	\$0.10	\$0.40
<b>Option 1 - cost per door</b>			<b>\$2.38</b>
<b>Option 2- Standard wood-frame door</b>			
Plastic*	5' x 7'	left over*	
Lumber - 2x4 8'	3	\$1.98	\$5.94
2x4 x 10'	1	\$3.27	\$3.27
4' lath	6	left over	
Hinges	2	\$1.08	\$2.16
Gate latch	1	\$4.00	\$4.00
Paint	left from end wall		
<b>Option 2 - cost per door</b>			<b>\$15.37</b>
<b>Option 3 - Top-venting wood frame door</b>			
Plastic*	5' x 7'	left over*	
Lumber - 2x4 x 8'	3	\$1.98	\$5.94
2x4 x 10'	3	\$3.27	\$9.81
4' lath	7	left over	
Hinges	4	\$1.08	\$4.32
Gate latch for main door	1	\$4.00	\$4.00
Bolt latch for top door	1	\$1.68	\$1.68
Paint	left from end wall		
<b>Option 3 - cost per door</b>			<b>\$25.75</b>

\*There may not be sufficient left over plastic to cover the door.

Table 3. Cutting instructions for 2x4 boards to construct one end wall.					
#	Length	Length	Part#	Length	Part #
1	16'	un-cut	"A"		
2	10'	5'	"C"	4' - 6"	"I"
		4' - 6"	"L"	(2) 2' - 6"	"E"; "H"
2	8'	(2) 4'	"F"; "G"	(2) 3' - 10"	"J"; "K"
2	8'	(2) 6' - 5½"	"B"; "D"		

### Constructing a Simple Frame Door

1. To construct one [simple door](#) to fit into the end wall openings you will need one 10' long 2x4 and three 8' long 2x4's.
2. Cut the 2x4 pieces to the lengths specified in Table 4 to minimize wastage, marking the pieces with the appropriate part letters as you cut them. Assemble according to Diagram #2. Start the door construction with board "a" and finish the construction with board "e".

Table 4. Cutting instructions for 2x4 boards to construct a simple door.			
#	Length	Length	Part
2	8'	(2) 6' - 3"	"a", "c"
1	8'	Un-cut	"e"
1	10'	(2) 4' - 8"	"d", "b"

3. Assemble parts "a" to "d" as shown in Diagram #2 using 3" screws. Make sure the boards fit together at 90° angles.
4. Lay board "e" against the assembled door. Align the edges of the board to the corners of the door, mark the angles from below and cut them to fit.
5. Attach board "e" with 3" screws.

6. After building the door, the wood can be protected with a coat of exterior grade latex paint.
7. Cover the door with a sheet of plastic, attaching the plastic around the door frame using lath strips and 1 5/8" screws.

### Constructing a Door with Top Vent

1. To construct one [top-venting door](#) to fit into the end wall openings you will need two 10' long 2x4's and four 8' long 2x4's.
2. The instructions below will construct one door as per Diagram #3. Cut the 2x4 lumber to the lengths specified in Table 5 to minimize wastage. Mark the pieces with the appropriate numbers as you cut them. Start the door construction with part "AA" and finish the construction with part "EE".

Table 5. Cutting instructions for 2x4 boards to construct a top-venting door.					
#	Length	Cut length	Part #	Cut length	Part #
2	8'	(2) 6' - 3"	"AA"; "CC"	(2) 1' - 6"	"HH"; "KK"
1	8'	4' - 8"	"BB"		
1	8'	Un-cut	"FF"		
2	10'	(2) 4' - 8"	"DD"; "EE"	(2) 4' - 4½"	"GG"; "JJ"

3. Assemble parts "AA" to "EE" as shown in Diagram #3 using 3" screws. Make sure that all boards fit together at 90° angles.
4. Lay board "FF" on top of the assembled door. Align the edges of the board to the corners of the door, mark the angles from below and cut them to fit.
5. Attach board "FF" with 3" screws.
6. To open properly, the vent door must be [beveled](#) on one end. Cut an angle on one end of parts "HH" and "JJ" such that the front (outside relative to the door) of the board is 1'-6" and the back (inside relative to the door) of the board is 1'-5½" (see side view of door vent: Diagram #3).

7. Assemble parts “GG” to “JJ” to make the vent door. Make sure that the shorter side of boards “HH” and “JJ” are facing the same way. When attaching board “GG”, it should be on a slant matching the angle of the upper cut surfaces of boards “HH” and “JJ”.
8. Insert the vent door into the vent opening on the door making sure that shorter angled edges of the boards are facing inward and upward. Attach the vent door to the main door with two hinges on the outside bottom of the vent door.
9. After building the top venting door, the wood can be protected with a coat of exterior grade latex paint.
10. Cover the door with a sheet of plastic, attaching the plastic around the door frame using lath strips and 1 5/8” screws. A single uncut sheet of plastic can be used to cover both the vent door and the lower portion of the main door.

## Tunnel Assembly

Having built the end walls, doors and determined the location of your tunnel house, it is best to prepare the site prior to construction. Ground preparation can include deep plowing and tilling or rototilling. Prepare an area larger than the size of the tunnel.

1. Mark tunnel corners with rebar corner anchors. Measure diagonal distances to ensure that the layout is square. For example, for a 42'×14" tunnel the diagonal distances should be approximately 44' - 3½".
2. Stand one [pre-constructed](#) end wall in place and insert rebar corner anchors through the drilled holes in the end wall base plate. One rebar corner anchors may need to be moved slightly so that the rebar is centered in the appropriate base plate hole.
3. Make sure the end wall is plumb then drive four T-posts into the ground on the inside of the end wall. T-posts are located by and will be attached to boards B, D, F and G of the end wall. Posts should be driven into the soil so the top of the post is about 4 feet high. [Attach the end wall](#) in two places to each T-post using plumber’s strapping and 1 5/8” wood screws. Repeat this process on the opposite end wall making sure the corners are square and the walls are plumb.
4. Once the end walls are properly positioned and plumb, drive the rebar corner anchors 18-inches into the ground (leave 6-inches protruding above the soil line to anchor the PVC arches).
5. Tightly stretch baling twine along one side of the tunnel, and tie to rebar corner anchor posts to provide a guide for the 13 rebar side anchors. Starting at one corner lay out the rebar side anchors every 3 feet. Insert rebar pieces [18 inches into the ground](#) using the twine to keep the rebar side anchors in line with the corners. Repeat on the opposite side of the tunnel.
6. Cut 13 4-foot lengths and 13 22-foot lengths of baling twine. Tie the 4-foot length of twine at ground level to the 13 rebar side anchors along one side of the tunnel. Then tie a loop in the free end of each pieces of twine. Tie the 22-foot lengths of twine to the rebar side anchors on the opposite side of the tunnel. Position the twine pieces on the outside of the tunnel. The twine will help hold down the plastic (step #14).
7. From two 20-foot lengths of PVC pipe, cut 15 28-inch long pieces. Assemble the 15 22-foot arches by gluing the 28-inch PVC pieces into the bell ends of 20-foot lengths of PVC using PVC cement.
8. After the glue dries, place each of the 15 PVC arches into position by sliding the pipe ends over the protruding ends of the rebar side anchors on opposite sides of the tunnel. The two end arches should slip over the rebar and fit into the [1¼](#) inch drilled holes in the end wall base plates. The end arches should contact the end walls at each corner of the door opening and at the hip locations (Diagram 1). [Fasten the end arches](#) to the end walls at the hip and door corners using plumber’s strapping and 1 5/8” wood screws. To increase the life of the plastic cover, coat the outside of the PVC framework with latex paint, wherever the plastic will contact the framework.
9. Construct a “ridge purlin” by connecting the remaining PVC pipe end-to-end and cutting the last piece so that the purlin is the length of the tunnel. If the tunnel is to be portable, the purlin pieces should be dry fitted (do not

glue the pipes together). [Attach the ridge purlin](#) to the lower side of each arch at the peak on 3-foot centers. We have found that aluminum cross connectors (1.315" x 1.315") help to strengthen the tunnel and keep the ribs evenly spaced (available from Farm Tek; [www.farmtek.com](http://www.farmtek.com)).

10. On a calm day, cover the tunnel with the 24' wide sheet of plastic. This works best if you have some help. A slight breeze can make this process more challenging, and a stiff wind will make it impossible. Unroll and unfold the plastic and pull it over the PVC framework. Square the plastic over the tunnels frame so that there are equal amounts of plastic on each end of the tunnel and approximately 1 foot of plastic contacts the ground along both sides of the tunnel. The extra plastic on the ends is used to cover the end wall to the door opening. It is helpful to use several of the twine pieces to tie down the plastic before you attach it to the end wall.
11. Excess plastic that covers the door openings will need to be [removed](#) once the plastic is centered on the tunnel. Leave about 6 inches of extra plastic at the door frame and baseboard. This plastic is wrapped around the lath strips.
12. Starting at one end, attach the plastic to the doorway opening using the 4-foot lengths of lath. Wrap approximately 6 inches of plastic several times around lath strip and fasten the lath and plastic to the [door header](#) using 1 5/8" screws. Next wrap and fasten the plastic to the [door posts](#) and finally attach the plastic to the base plate. Keep the plastic tight when securing the lath strips to the end wall.
13. Repeat step 12 on the opposite end of the tunnel house. Start by trimming off the excess plastic covering the door opening. After wrapping the plastic around the lath, pull the plastic as tightly as possible across the length of the tunnel house. Attach the lath to the door header using the 1 5/8" screws. Next wrap, stretch and attach the plastic to the door post being sure to pull the plastic tight. Finally, stretch and attach the plastic to the base-plate.
14. After attaching the plastic to the end frames, [tie it down](#) to the rebar side anchors using

the twine. Stretch the 22-foot lengths of baling twine (step #6) over the top of the plastic and tie them to the 4-foot lengths of twine on the opposite side. Slip the end of the 22' length through the loop eye, cinch the twine tight, and tie them together with a slip knot. The slip knots will allow periodic retighten of the twine to maintain adequate tension on the plastic.

15. [Cover the doors](#) with plastic. Wind the plastic around a strip of lath and screw it to the door frame. Repeat on the opposite side of the door frame to create tension on the plastic. Attach the plastic on the top and bottom of the door frame. When attaching the plastic to the Top Venting Doors, attach the plastic to the side frames on the lower half of the door first, then attach the plastic on the bottom of the door before securing the plastic to the venting portion of the doors. If you attach the lath to the venting section of the door, it allows you to use only one piece of plastic which helps seal up the hinging joint on the bottom side of the vent (see picture).
16. Finish the tunnel by hanging the doors in the door openings using gate hinges. Alternatively, the door opening can be covered by a curtain-type door, consisting of a sheet of plastic, with a length of 2x4 attached to the base. This curtain type door can be rolled up and secured at the top of the door frame for ventilation.

## Structural Stability

This tunnel structure is designed as a low-cost alternative to more expensive engineered steel structures, thus it is not as sturdy. Care should be taken to close the side vents and doors when heavy winds are expected. We've also found that several [support posts](#) tied to the ridge purlin will provide temporary support for snow loads. We recommend brushing off the snow if more than 5 inches falls. With these precautions, our tunnels have withstood 45 mph winds and six Cache Valley winters.

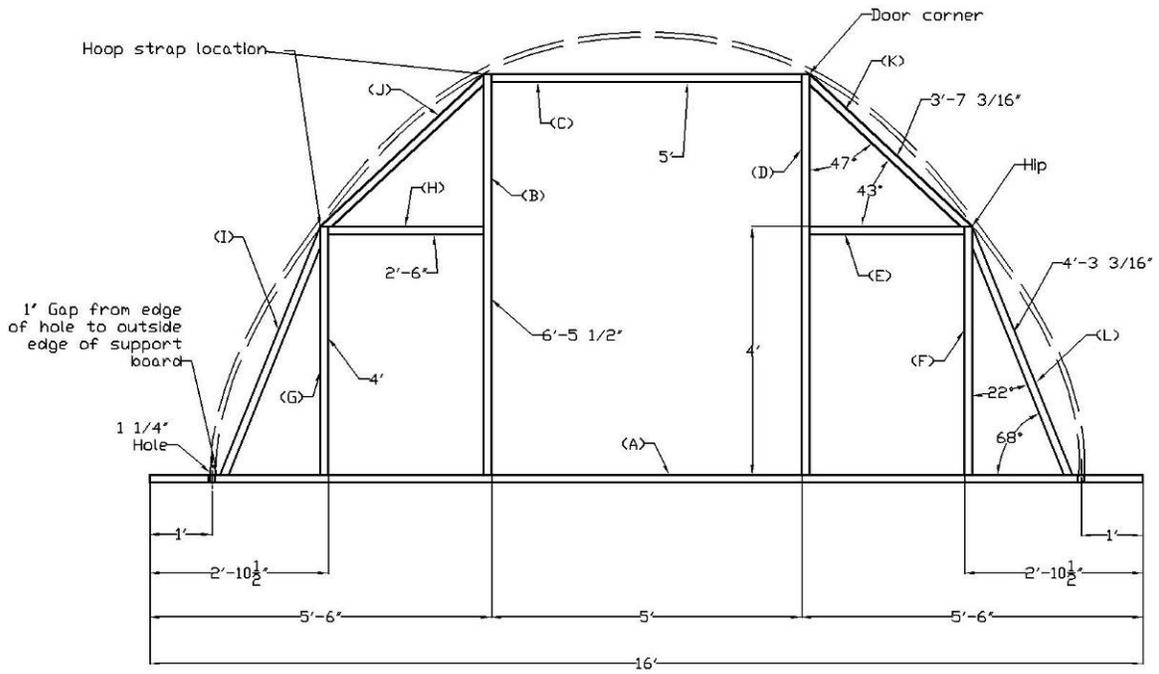


Diagram 1. End wall dimensions and part names.

[Return to Text](#)

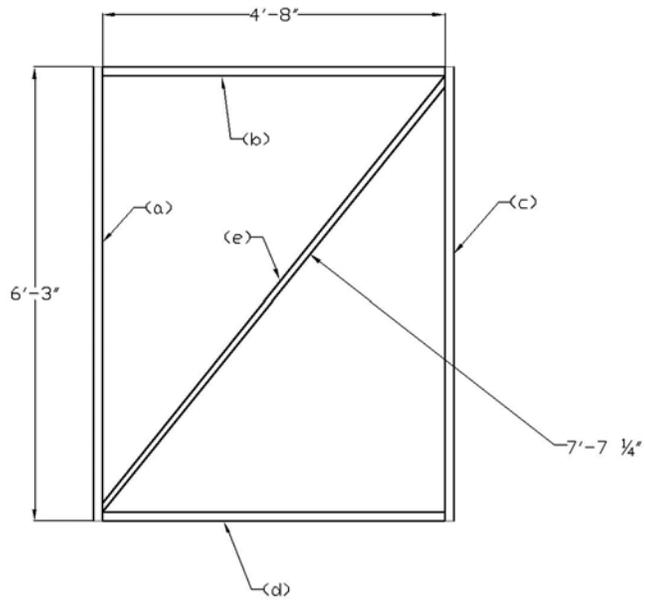


Diagram 2. Simple door.

[Return to Text](#)

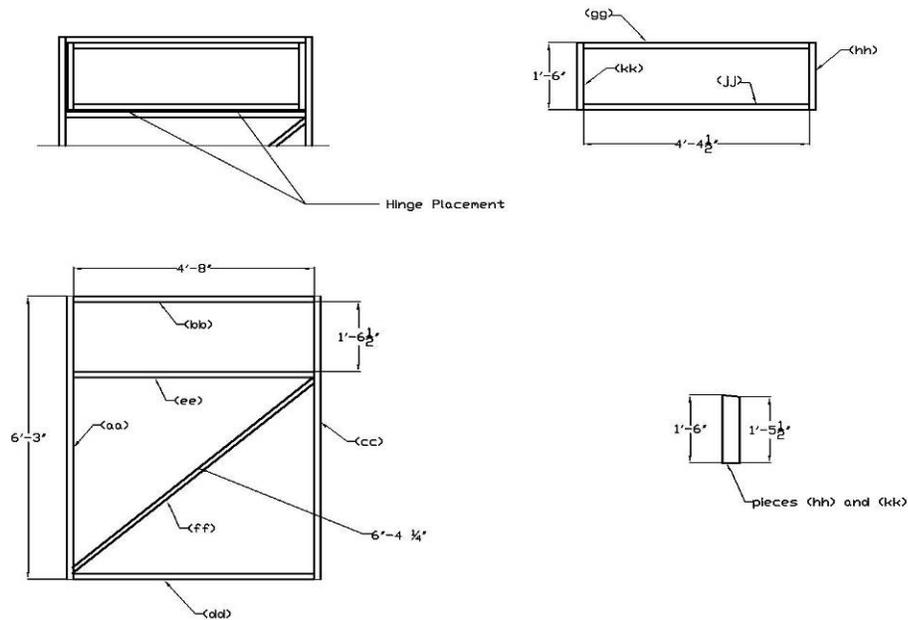


Diagram 3. Top venting door.

[Picture of top Venting door](#)

[Picture of beveled top vent](#)

[Return to text](#)

[Return to text](#)

Utah State University is committed to providing an environment free from harassment and other forms of illegal discrimination based on race, color, religion, sex, national origin, age (40 and older), disability, and veteran's status. USU's policy also prohibits discrimination on the basis of sexual orientation in employment and academic related practices and decisions.

Utah State University employees and students cannot, because of race, color, religion, sex, national origin, age, disability, or veteran's status, refuse to hire; discharge; promote; demote; terminate; discriminate in compensation; or discriminate regarding terms, privileges, or conditions of employment, against any person otherwise qualified. Employees and students also cannot discriminate in the classroom, residence halls, or in on/off campus, USU-sponsored events and activities.

This publication is issued in furtherance of Cooperative Extension work, acts of May 8 and June 30, 1914, in cooperation with the U.S. Department of Agriculture, Noelle Cockett, Vice President for Extension and Agriculture, Utah State University.



**Year Round Water Source for Winter Irrigation**

[Return to Text](#)



**10 Foot Spacing between tunnels to minimize shading**

[Return to Text](#)



Mark cutting angles for boards "I" and "L" by laying them on top of adjacent boards  
[Return to Text](#)



1 Inch Gap between 1 ¼" hole and board "L"  
[Return to Text](#)



**Top venting door**

[Return to Text](#)

[Return to Diagram](#)



Side view of top venting door with 1/2" bevel on top vent

[Return to Text](#)

[Return to Diagram](#)



**Pre-Constructed End Wall**  
[Return to Text](#)



**Attatch end wall to t-posts with plumbers strapping**  
[Return to Text](#)



**Drive 24 inch rebar stakes 18 inches into the ground**  
[Return to Text](#)



PVC pipe slides into 1 ¼" drilled holes

[Return to Text](#)



**Fasten end arches to the pre-constructed end walls with plumbers strapping. End arches should contact the end wall at the top corners of the door frame, as well as at the hip locations (shown above). Duct tape can be used to ensure that the plumbers strapping does not rip the plastic.**

[Return to Text](#)



**Connect purlins to ribs with cross connectors**

[Return to Text](#)



**Remove excess plastic leaving about 6 inches of overhang**

[Return to Text](#)



**Attach plastic to door header with lathe board**

[Return to Text](#)



**Attach plastic to door posts**

[Return to Text](#)



**Tie plastic down with rope**

[Return to Text](#)



Cover the door with plastic  
[Return to Text](#)



Support posts for snow load  
[Return to Text](#)